

USER GUIDE

User guide

USER GUIDE


For hair,
anywhere.

USER GUIDE

LADYSPOT Trimmer

User Guide

Model: PBT-10

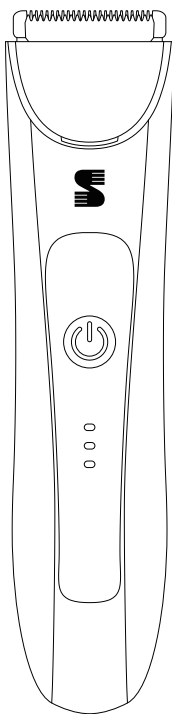

LADYSPOT - SPOTMATE'S LINE FOR WOMEN

Sincerely Thank you

Why do we shave?

Because we're preparing for something, even if we don't say it out loud. For moments that deserve the care and attention to our skin. A build of anticipation. A day that might shift into something more. A step closer to closeness.

At its heart, grooming is being open to possibility. A quiet confidence that knows if something happens, I'm already there.

And Spotmate is right there with you.

Calm skin, steady nerves. A close shave with whatever the day, night, or season might become.

For any questions or issues, please email us:
service@spotmatecare.com

Or SMS SPOTMATE to (833)524-0498

Or Call us Toll-Free Calls at 1-833-359-5467

Or visit: www.ladyspotstore.com/warranty


We will go above and beyond to resolve any customer issue within 24 hours.

Best Regards,
Yvonne
Founder of LADYSPOT



Quick Start Guide

1. Charge it Up

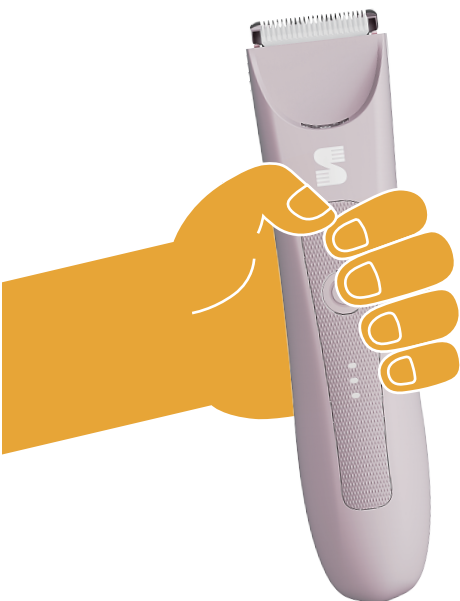

Fully charge the trimmer before first use and every time the LED flashes.




2. Attach guard comb



Choose the right comb for the length of hair you want to shave and install it on your trimmer.

3. Trim safely

Stretch and flatten the skin and go slowly.
Don't trim over bumps on the surface.

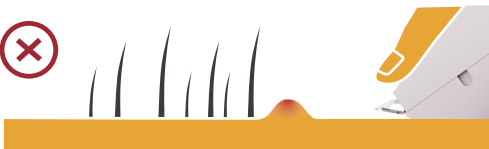


Comb

Snap-In Blade Assembly


Step 1:

Put part A into slot B with blade-side up.

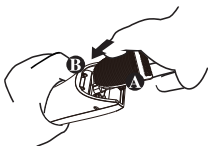


Step 2:

Press cutters back until you hear a click.

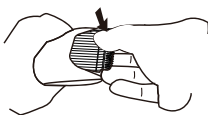

Snap-in Blade Disassembly

Press replaceable blade in thumbs and push forward in the direction of arrows.

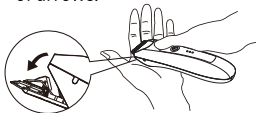

Note:

Blades can be fragile. Throw any broken blades away immediately. Blades should be replaced every three months.

Adjustable Guide combs

The trimmer comes with 3 adjustable guide combs for hair length preference.



1.5mm



3-6mm




9-12mm

Put on or take off the combs


Comb application:

Align the sides of the grooming length with the grooves on the underside of the comb attachment and slide it into place. Be sure to slide the comb onto the grooming head completely.

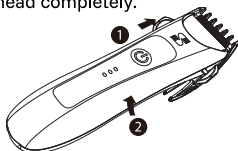

Comb removal:

Drag open one side the comb. To keep combs from being damaged, pull lightly.

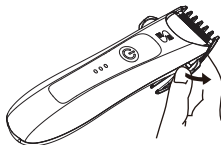

Note: Choose and attach the proper comb.

Charging indicator



Please charge the trimmer before initial use

Charging unit


Plug the usb charger in and fully charge the trimmer before using. This will take about 1.5 hours.

LED indicator

The LED indicator will flash while charging. The unit is fully charged when battery indicator is steady on.

Reminder

Charge only when needed.
Do not overcharge.

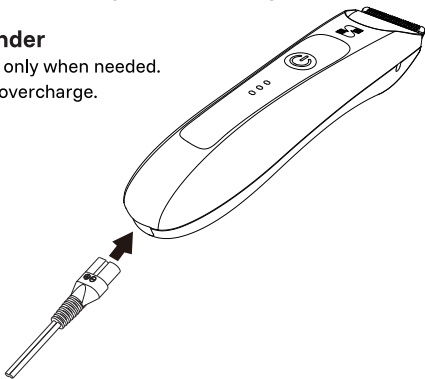

Warning

Do not plug in USB cable with wet hands. Do not damage, stretch, bend or pull the charging cable.

Turn trimmer off before disassembling the battery. After removing the battery do not connect the trimmer to the power cord.


After removing the battery, take it to a designated collection center. Please store the shaver at room temperature.

Maintenance

Snap-In Blade Cleaning


Step 1:

Clean off hair scraps with cleaning brush.

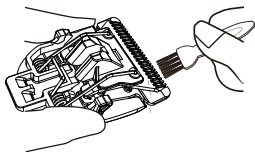

Step 2:

Press down cutter frame handles in the direction of arrows and clean off hair scraps in between blades niches.

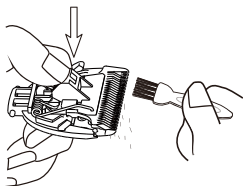

Body cleaning


Step 3:

Brush hair scraps in replaceable blade slots.



Step 4:

Wipe the shaver exterior with a soft, damp cloth.

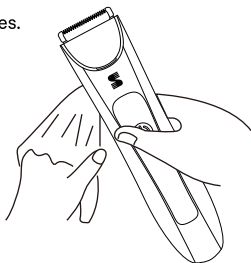

Note:

Turn the shaver off before cleaning by pressing the on/off button. The shaver is equipped with ceramic blades to help eliminate rusting. However, regular maintenance is highly recommended for optimal performance and longer life.



FCC Warning Statement:

This device complies with Part 15 of the FCC Rules.


Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Accessories

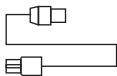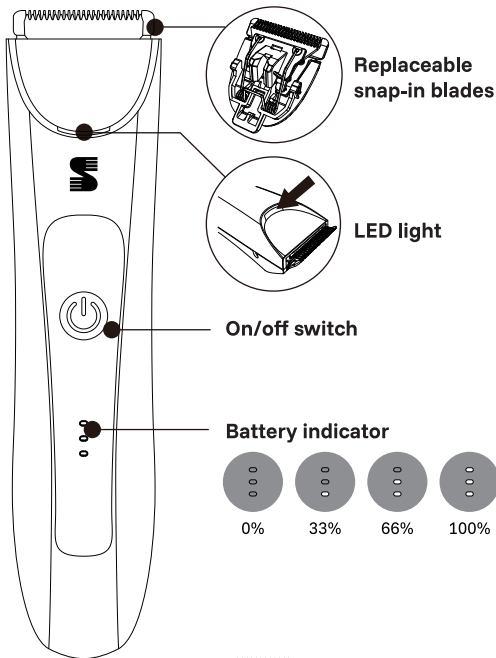

USB cable

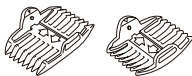

5 Adjustable guide combs



Cleaning brush

Customer Service

LADYSPOT- SPOTMATE'S LINE FOR WOMEN strives for user friendly products for household items. We aim not only to create a product, but also an item that is filled with care love from us to our customers.

If you have any issues at all please contact us directly (service@spotmatecare.com) and we will help you out.

Or SMS SPOTMATE to (833)524-0498

Or Call us Toll-Free Calls at 1-833-359-5467



Register Your Free Warranty

At LADYSPOT – SPOTMATE’S Line for Women, we uphold the highest quality standards.

Be sure to activate your FREE two-year warranty for added peace of mind.

www.ladyspotstore.com/warranty



USER GUIDE


User guide

For hair, anywhere.

LADYSPOT Trimmer

User Guide

Model: PBT-10

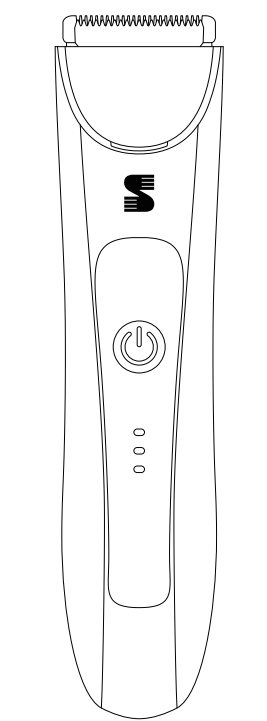

LADYSPOT - SPOTMATE'S LINE FOR WOMEN

Sincerely Thank you

Why do we shave?

Because we're preparing for something, even if we don't say it out loud. For moments that deserve the care and attention to our skin. A build of anticipation. A day that might shift into something more. A step closer to closeness.

At its heart, grooming is being open to possibility. A quiet confidence that knows if something happens, I'm already there.

And Spotmate is right there with you.

Calm skin, steady nerves. A close shave with whatever the day, night, or season might become.

For any questions or issues, please email us: service@spotmatecare.com
Or SMS SPOTMATE to (833)524-0498
Or Call us Toll-Free Calls at 1-833-359-5467
Or visit: www.ladyspotstore.com/warranty

We will go above and beyond to resolve any customer issue within 24 hours.

Best Regards,
Yvonne
Founder of LADYSPOT




Quick Start Guide

1. Charge it Up



Fully charge the trimmer before first use and every time the LED flashes.


2. Attach guard comb

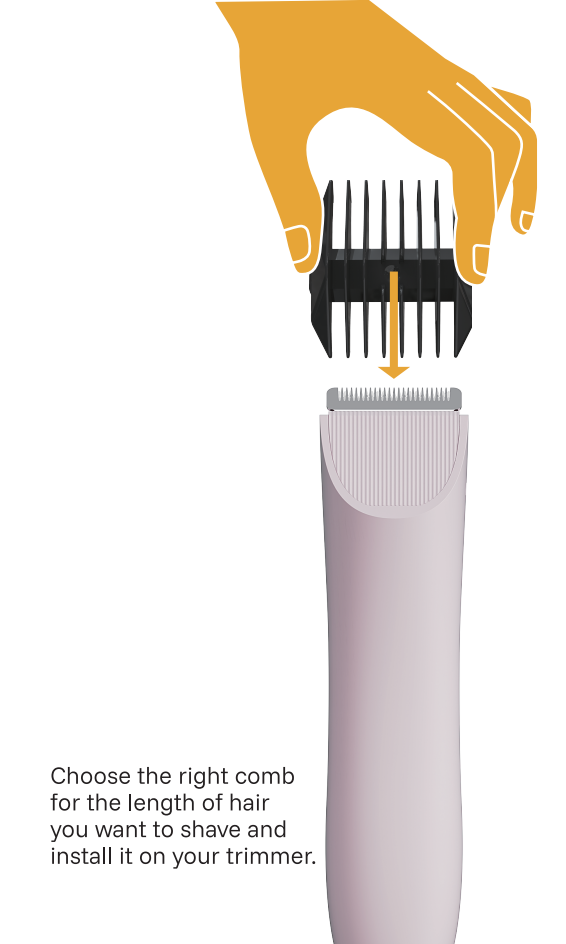

Choose the right comb for the length of hair you want to shave and install it on your trimmer.

3. Trim safely

Stretch and flatten the skin and go slowly. Don't trim over bumps on the surface.

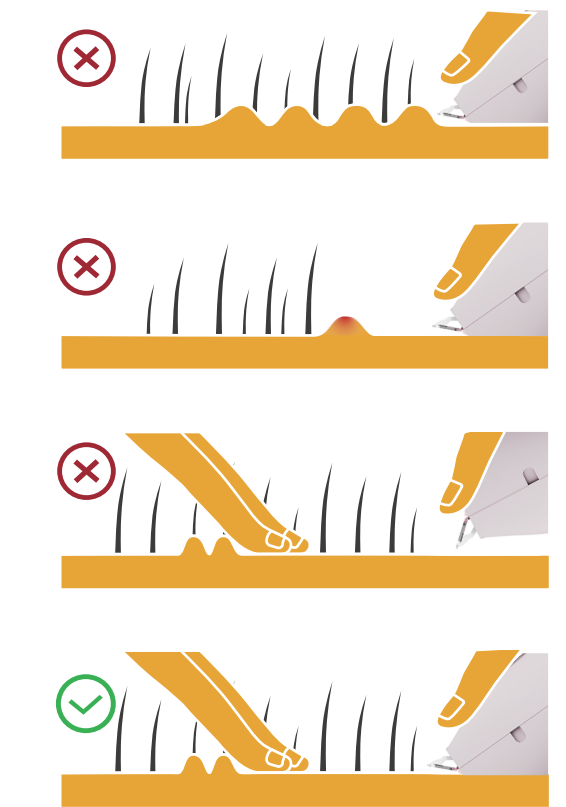


Comb

Snap-In Blade Assembly

Step 1: Put part A into slot B with blade-side up.



Step 2: Press cutters back until you hear a click.

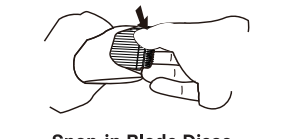

Snap-in Blade Disassembly

Press replaceable blade in thumbs and push forward in the direction of arrows.



Note: Blades can be fragile. Throw any broken blades away immediately. Blades should be replaced every three months.


Adjustable Guide combs

The trimmer comes with 3 adjustable guide combs for hair length preference.




Put on or take off the combs

Comb application: Align the sides of the grooming length with the grooves on the underside of the comb attachment and slide it into place. Be sure to slide the comb onto the grooming head completely.

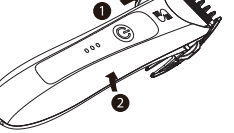

Comb removal:

Drag open one side the comb. To keep combs from being damaged, pull lightly.

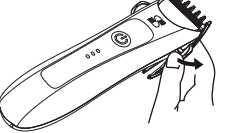

Note: Choose and attach the proper comb.

Charging indicator

Please charge the trimmer before initial use

Charging unit


Plug the usb charger in and fully charge the trimmer before using. This will take about 1.5 hours.

LED indicator

The LED indicator will flash while charging. The unit is fully charged when battery indicator is steady on.

Reminder

Charge only when needed. Do not overcharge.

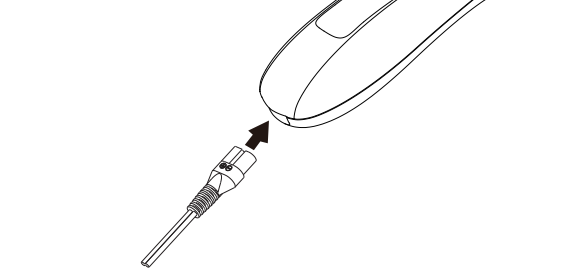


Warning

Do not plug in USB cable with wet hands. Do not damage, stretch, bend or pull the charging cable. Turn trimmer off before disassembling the battery. After removing the battery do not connect the trimmer to the power cord. After removing the battery, take it to a designated collection center. Please store the shaver at room temperature.

Maintenance


Snap-In Blade Cleaning

Step 1: Clean off hair scraps with cleaning brush.

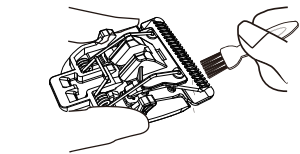


Body cleaning

Step 3: Brush hair scraps in replaceable blade slots.

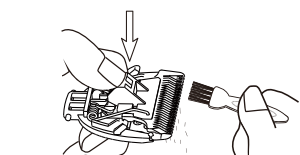

Step 2:

Press down cutter frame handles in the direction of arrows and clean off hair scraps in between blades niches.

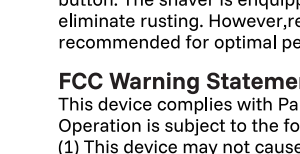

Step 4:

Wipe the shaver exterior with a soft, damp cloth.


Note:

Turn the shaver off before cleaning by pressing the on/off button. The shaver is equipped with ceramic blades to help eliminate rusting. However, regular maintenance is highly recommended for optimal performance and longer life.

FCC Warning Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Accessories

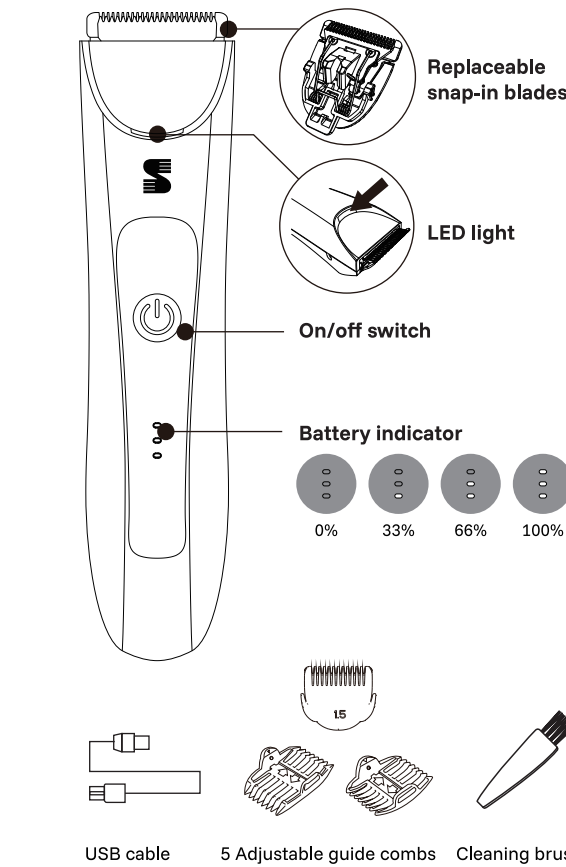

Customer Service

LADYSPOT- SPOTMATE'S LINE FOR WOMEN strives for user friendly products for household items. We aim not only to create a product, but also an item that is filled with care love from us to our customers. If you have any issues at all please contact us directly (service@spotmatecare.com) and we will help you out. Or SMS SPOTMATE to (833)524-0498 Or Call us Toll-Free Calls at 1-833-359-5467



Register Your Free Warranty

At LADYSPOT - SPOTMATE'S Line for Women, we uphold the highest quality standards. Be sure to activate your FREE two-year warranty for added peace of mind.

www.ladyspotstore.com/warranty

